





Quick User Guide

This describes main user operations. For the full user manual, see our website: www.riscogroup.com

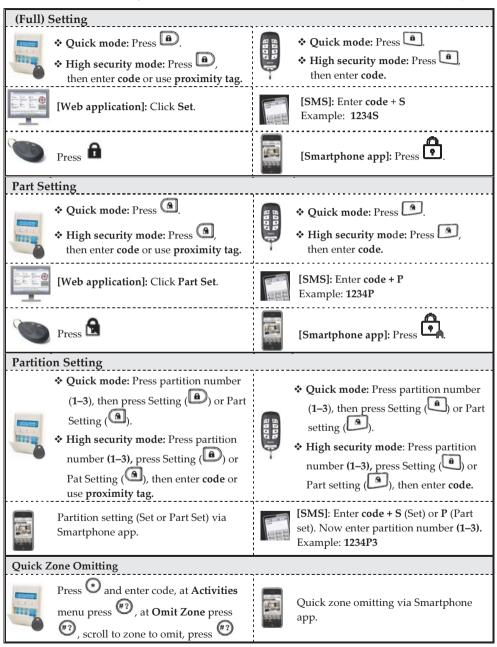





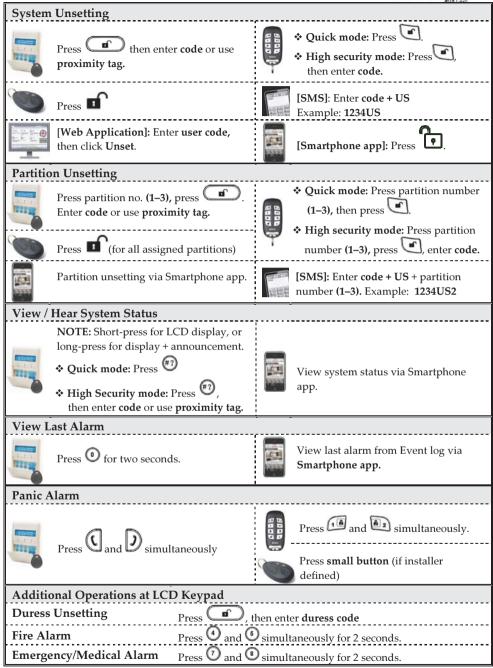





Additional Operations at LCD Keypad		
System Chime On/Off	Press of for 2 seconds.	
Output Control	Press ①, ②,	or ③ (engineer-defined) for 2 seconds.
Wake up keypad	Press 💽.	
Main Panel Speaker	Press 🛈, ther	n press 🌀 for 2 seconds.
Volume		level (0–4), and then press $^{ ilde{m{g}}}$.
Change keypad and panel		imultaneously for 2 seconds.
language		language, then press .
SMS Commands		
Set: code + S (Example: 1234S)		Omit Zone: code + OM + zone number
Part Set: code + P (Example 1234P)		Un-Omit Zone: code + UNOM + zone number
Unset: code + US (Example 1234US)		View last alarm : code + AL
Partition Set: code + S + partition number		Activate Output: code + POON +
Partition Part Set: code + P + partition number PO number		
Partition Unset: code + US + par	tition number	Deactivate Output: code + POOFF +
Get system status: code + ST PO number		
Telephone Event Notifications / Commands (not available during Cloud mode)		
When Receiving a Call:		Acknowledgment Menu
1. Pick up the phone and say "Hello" or press		❖ Acknowledge message: Press 1
#; You will then hear an event announcement		❖ Acknowledge and stop all dialing:
message.		Press 2 + code + #
2. Now acknowledge the event (see		❖ Access Operations menu: Press 3 + code + #
Acknowledgment menu).		❖ Listen and Talk: Press 6 + code
		❖ Repeat event message: Press #
		* Repeat the Acknowledgment menu: Press *
Sound Indicators		
Intrusion alarm: Continuous, rapid beeping.		
Fire alarm: Stagge	ggered, rapid beeping.	
Exit delay: Slow b	zzer beeps until the Exit Delay time period expires.	
Entry delay: Slow b	buzzer beeps until the Entry Delay time period expires.	
Confirm operation: 1-secon	cond tone.	
	Three rapid error beeps.	
Set/Unset chirp: 1 sound	1 sounder chirp = system set	
_	2 sounder chirps = system is unset	
4 sounder chirps = system unset af		m unset after an alarm





LED Indicators O Power LED (Green) Set/Alarm LED (Red) ✓ Ready LED (Green) On: Power OK. On: System fully set. On: System ready. Rapid Flash: Alarm. Rapid Flash: AC fault. Off: Open zones. Slow Flash: System in Exit Slow Flash: Low battery Slow Flash: Ready to set with open fault. Delay. entry/exit zone. [All LEDS] Learn mode: all ⚠ Fault LED (Orange) 🖬 Stav LED (Red) LEDS are flashing, one after the On: System Part set. Rapid Flash: Fault. other. Off: System unset. Off: No fault.

Assign and Edit Users (User Codes)

- 1. Press and enter code.
- 2. Scroll to **Codes/Tags**, then press
- 3. Scroll to **User Codes**, then press ^{#?}
- 4. Scroll to New/Change, then press .
- 5. Scroll to select the **index number** (to designate to a system user), then press ^{#3}.
- 6. Enter (or re-enter) the new code.
- 7. Re-enter the **new code**; the system beeps and "Accepted" displays.
- 8. Repeat the above steps for additional codes.

Assign Proximity Tag

- 1. Press and enter code.
- 2. Scroll to **Codes/Tags**, then press #?
- 3. Scroll to **Proximity Tags**, then press **.
- 4. Scroll to New/Change, then press .
- 5. Scroll to select the index number (to designate to a proximity tag user), then press
- 6. Within 10 seconds, hold the proximity tag at 1–2 cm from the keypad buttons; a long beep indicates the tag has been registered.

 NOTE: If the tag was already registered, 3 beeps will sound and a message will display.

Registering to the RISCO Cloud

- 1. Go to www.riscocloud.com/register
- 2. Fill in your first and last name.
- 3. Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4. Define **password** (minimum of 6 characters and at least one digit), and then confirm.
- 5. Enter the **15 digits Panel ID** per sticker (located on the side of the panel or as printed on the postcard packaged with the main panel). Do not enter the hyphens.
- 6. Complete registration form, and then press Register.
- 7. Open the e-mail received at the email account you had defined as the Login Name in step 3, and click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1. Go to www.riscocloud.com
- 2. Enter your user name and password (as defined during the registration process).
- 3. Enter the passcode (user code).
- 4. Click Enter.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.

© RISCO Group 09/2014. All rights reserved.

5IN1876 B