


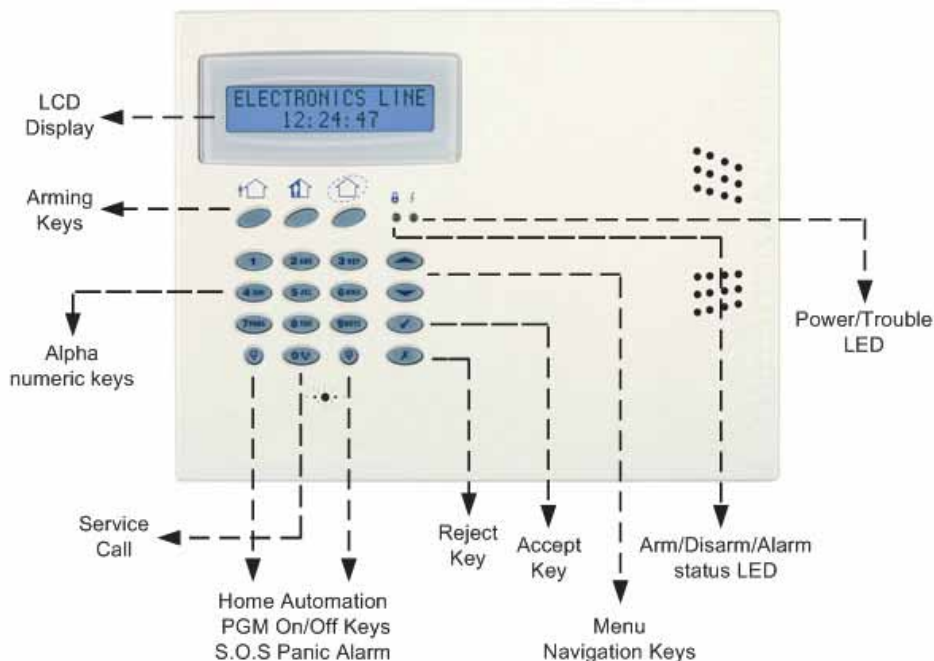

















Quick User Guide



UPGRADING
EVERYDAY
SECURITY

Thank you for choosing Prime wireless intruder control panel. This quick start guide describes the main user operating actions of the Prime. To view the full version of the user manual, please refer our website www.electronics-line.com.

Full Arm	Press 	
Partial Arm	Press 	If required, enter your user code
Perimeter Arm	Press 	
Disarm	Enter your user code	Also silences the siren in the event of an alarm
Panic alarm	Press and hold down  + 	
Fire alarm	Press and hold down  + 	
Medical alarm	Press and hold down  + 	
Check system troubles	Press  and scroll the list	Also silences any trouble tones
Global Chime	Press  	
Access Menu Mode	Press  then [User Code]	
Service Call	Press and hold 	
Turn On / Off PGM	 /  → 30	

LEDs Indication



Red LED:

Off: System disarmed

On : System armed

Flashing: Alarm



Green LED:

On: Power OK

Off: No power

Flashing: (Slow) Low battery – main or detector, (Fast) AC loss

Edit/Delete User Code

1. Go to the main display press
2. Enter master code (Default code 1234)
3. Select [4] User Code and press
4. Select a user and press
5. Select [1] Edit Code.
6. Edit the user code or enter 0000 to delete
7. Press .

Bypass / Unbypass a zone

1. Go to the main display press .
2. Enter master code (Default code 1234)
3. On the Main menu, press [21]
4. Select a zone and press to toggle
5. To save the status, press and then .

SMS Control Commands

Controlling the System through SMS

Command Code Numbers:

120: Disarm

121: Full arm

122: Part arm

123: Perimeter arm

124: Full + Perimeter Arm

125: Part + Perimeter Arm

0XX: HA unit XX off

1XX: HA unit XX on

030: PGM off

130: PGM on

200: System arm status

SMS Structure: [Free text - Up to 43 characters][#][User Code][Command]

Optional Free Text							User Code				Command		
D	I	S	A	R	M	#	1	2	3	4	1	2	0

Example: DISARM#1234120

Example to activate HA unit: Boiler On#1234108

SMS Command Descriptor										User Code				On	Unit	
B	o	i	l	e	r		O	n	#	1	2	3	4	1	0	8

Telephone Control Commands

1. Dial the number of the premises

- ❖ If your system is connected to a regular phone line. Dial the number of the panel and wait for three rings then hang up. Wait at least five seconds and dial the number again. On the second ring the control system answers and sounds two tones.
- ❖ If your system support cellular communication dial and wait until the system answers and two tones are heard.

2. Within 15 seconds, enter the Telecontrol Code (code 29). After a tone sounds, press:

2: 2 Way Audio

3: Full arm

4XX: Activate Home Automation unit

5XX: Deactivate Home Automation Unit

430: PGM on

530: PGM off

6: Disarm

7: Extend the call

9: Cancel siren

***#:** Disconnect the line

Keyfob



: Full Arm



: Disarm



: Part Arm, Home Automation



/ : Perimeter Arm, Home Automation